

**BOSCH**

Bosch Limited  
Post Box No:3000  
Hosur Road, Adugodi  
Bangalore-560030  
Karnataka, India  
Tel +91 80 222-20088  
Fax +91 80 222-72728  
www.boschindia.com  
PAN AAACM 9840 P

Bosch Automotive Aftermarket  
Toll Free No: 1800 108 1081

5 September 2013

**List of Replaced & non running part numbers**

<b>Material</b>	<b>Material Description</b>	<b>NON RUNNING/REPLACED</b>
10009170043UC	NEEDLE BEARING	0399C740033UC
10009170073UC	NEEDLE-ROLLER BEARING	0399C740053UC
10009170103UC	NEEDLE BEARING	0399C740053UC
10040112104AR	ARMATURE	0399D760014AR
10040112204AR	ARMATURE	0399D760014AR
F002G702104AR	ARMATURE	0399D760014AR
10034500293UC	HEX SCREW	10034500503UC
10040110863UC	ARMATURE	10040113034AR
10040112264AR	ARMATURE	10040113164AR
10043367623UC	BRUSH HOLDER	10043364234AR
10043368063UC	BRUSH HOLDER	10043364234AR
10043368944AR	BRUSH HOLDER	10043365184AR
F002G202704AR	BRUSH HOLDER	10043365333UC
10003010113UC	BUSHING	10043367623UC
10046010103UC	RETAINING RING	10046010123UC
10050014114AR	STATOR FRAME	10050014374AR
F002G206444AR	OVERRUNNING-CLUTCH DRIVE	10062096904AR
11210380183UC	COVER PLATE	11210380193UC
F002G116783UC	ROUND NUT	11233420033UC
F002G911023UC	SPACER RING	1202020083UC
F002G215353UC	SHIM	20001011113UC
20019331494AR	FORK LEVER	20019331483UC
F002G202354AR	STARTER	90000330164AR
90010358854AR	DRIVE END SHIELD	90010358194AR
90010358824AR	DRIVE END SHIELD	90010358304AR



90010358874AR	DRIVE END SHIELD	90010358424AR
90010358634AR	DRIVE END SHIELD	90010358604AR
90010358714AR	DRIVE END SHIELD	90010358684AR
91910373004AR	VIBRATING-TYPE REGULATOR	91910373024AR
F002G201114AR	SOLENOID SWITCH	93300310104AR
F002G202494AR	SOLENOID SWITCH	93300310104AR
F002G202394AR	SOLENOID SWITCH	93300310124AR
F002G101814AR	ROTOR	F 002G104864AR
F002G102764AR	ROTOR	F 002G105004AR
F002G102564AR	ROTOR	F 002G105024AR
F002G108274AR	ALTERNATOR	F000BL06Z24AR
F002G202524AR	STARTER	F000CD03014AR
F002G200334AR	STARTER	F000CD03034AR
10034500523UC	HEX SCREW	F000CD10933UC
F002G103704AR	STATOR	F002G100904AR
91210373034AR	RECTIFIER	F002G101754AR
91210350003UC	STATOR	F002G102024AR
F002G100633UC	PROTECTIVE CAP	F002G102154AR
F002G100664AR	RECTIFIER	F002G102284AR
F002G100894AR	EL TRANSISTOR REGULATOR	F002G103464AR
F002G101294AR	DRIVE END SHIELD	F002G103614AR
F002G104084AR	PROTECTIVE CAP	F002G104073UC
F002G110044AR	STATOR	F002G104124AR
91210340024AR	ROTOR	F002G104614AR
F002G101994AR	ROTOR	F002G104614AR
F002G111454AR	ROTOR	F002G104634AR
F002G102754AR	DRIVE END SHIELD	F002G104654AR
F002G103624AR	RECTIFIER	F002G104784AR
F002G110014AR	ROTOR	F002G104884AR
F002G111103UC	ROTOR	F002G104944AR
F002G101054AR	ROTOR	F002G104984AR
F002G900274AR	STATOR	F002G105334AR
F002G104323UC	NON-RETURN VALVE	F002G105693UC
F00M9904103UC	DEEP-GROOVE BALL BEARING	F002G105773UC
F002G104124AR	STATOR	F002G106994AR
F002G107494AR	STATOR	F002G107024AR
F002G101864AR	STATOR	F002G107054AR
F002G107534AR	STATOR	F002G107054AR
F002G901874AR	STATOR	F002G107084AR
F002G102024AR	STATOR	F002G107494AR
F002G100924AR	ROTOR	F002G107714AR



F002G107714AR	ROTOR	F002G107974AR
F002G102274AR	ROTOR	F002G108914AR
F002G107724AR	ROTOR	F002G108914AR
F002G103764AR	EL TRANSISTOR REGULATOR	F002G109384AR
F002G103714AR	RECTIFIER	F002G109394AR
F002G113154AR	SLIP-RING END SHIELD	F002G112574AR
F002G111493UC	FITTING RING	F002G114553UC
F002G115333UC	VANE	F002G11533079
94911423003UC	SHOVEL	F002G115333UC
F002G101244AR	DRIVE END SHIELD	F002G115744AR
F002G110203UC	BUSHING	F002G116413UC
19009053763UC	DEEP-GROOVE BALL BEARING	F002G117223UC
91210309003UC	DEEP-GROOVE BALL BEARING	F002G117233UC
F002G200664AR	DRIVE END SHIELD	F002G200694AR
F002G203684AR	INTERMEDIATE BEARING	F002G200834AR
20070140653UC	CARBON-BRUSH SET	F002G200893UC
F002G202854AR	DRIVE END SHIELD	F002G201434AR
F002G200834AR	INTERMEDIATE BEARING	F002G202244AR
F002G201174AR	DRIVE END SHIELD	F002G202584AR
90010362004AR	OVERRUNNING-CLUTCH DRIVE	F002G202764AR
F002G201844AR	OVERRUNNING-CLUTCH DRIVE	F002G202774AR
90010362014AR	OVERRUNNING-CLUTCH DRIVE	F002G202784AR
90010362034AR	OVERRUNNING-CLUTCH DRIVE	F002G202794AR
90010362024AR	OVERRUNNING-CLUTCH DRIVE	F002G202804AR
F002G200634AR	OVERRUNNING-CLUTCH DRIVE	F002G202814AR
F002G201194AR	OVERRUNNING-CLUTCH DRIVE	F002G202824AR
F002G202364AR	OVERRUNNING-CLUTCH DRIVE	F002G202834AR
F002G201454AR	DRIVE END SHIELD	F002G203144AR
90010340034AR	ARMATURE	F002G203234AR
F002G205314AR	ARMATURE	F002G203234AR
F002G200514AR	SOLENOID SWITCH	F002G203334AR
F002G202384AR	DRIVE END SHIELD	F002G203374AR
F002G201064AR	DRIVE END SHIELD	F002G203404AR
20043360263UC	BRUSH HOLDER	F002G203584AR
F002G203644AR	ARMATURE	F002G203674AR



F002G202944AR	SOLENOID SWITCH	F002G204034AR
F002G203054AR	SOLENOID SWITCH	F002G204074AR
F002G203093UC	EXCITATION WINDING	F002G204153UC
F002G202544AR	ARMATURE	F002G204393UC
20058342814AR	INTERMEDIATE BEARING	F002G204484AR
F002G204184AR	COMMUTATOR END SHIELD	F002G204544AR
F002G202424AR	COMMUTATOR END SHIELD	F002G204574AR
F002G203134AR	COMMUTATOR END SHIELD	F002G204594AR
90010358744AR	COMMUTATOR END SHIELD	F002G204604AR
10050019994AR	STATOR FRAME	F002G205134AR
F002G208894AR	BRUSH HOLDER	F002G205224AR
10058510954AR	COMMUTATOR END SHIELD	F002G205524AR
F002G202874AR	COMMUTATOR END SHIELD	F002G205604AR
20058343374AR	DRIVE END SHIELD	F002G205644AR
F002G205763UC	NEEDLE BEARING	F002G20576079
F002G205764AR	NEEDLE BEARING	F002G20576079
90011403843UC	NEEDLE BEARING	F002G205793UC
F002G205894AR	DRIVE END SHIELD	F002G205984AR
10062000994AR	PLANETARY GEAR TRAIN	F002G206084AR
10062001434AR	PLANETARY GEAR TRAIN	F002G206104AR
10062003324AR	PLANETARY GEAR TRAIN	F002G206124AR
F002G202584AR	DRIVE END SHIELD	F002G206174AR
F002G205304AR	ARMATURE	F002G206524AR
F002G208914AR	BRUSH HOLDER	F002G206534AR
F002G208934AR	BRUSH HOLDER	F002G206574AR
F002G204484AR	INTERMEDIATE BEARING	F002G206884AR
F002G206894AR	DRIVE END SHIELD	F002G206904AR
10050013264AR	STATOR FRAME	F002G206914AR
10050011913UC	STATOR FRAME	F002G206944AR
F002G205204AR	SOLENOID SWITCH	F002G207064AR
10050013854AR	STATOR FRAME	F002G207174AR
F002G208944AR	BRUSH HOLDER	F002G207434AR
F002G208954AR	BRUSH HOLDER	F002G207444AR
F002G205544AR	ARMATURE	F002G207454AR
F002G205694AR	DRIVE END SHIELD	F002G207464AR
F002G208964AR	BRUSH HOLDER	F002G207504AR
F002G205194AR	DRIVE END SHIELD	F002G207564AR
F002G207744AR	COMMUTATOR END SHIELD	F002G207944AR
F002G202434AR	SOLENOID SWITCH	F002G208334AR
F002G205364AR	SOLENOID SWITCH	F002G208364AR
F002G208974AR	BRUSH HOLDER	F002G208404AR



F002G200604AR	SOLENOID SWITCH	F002G208504AR
F002G203544AR	SOLENOID SWITCH	F002G208544AR
F002G205254AR	SOLENOID SWITCH	F002G208554AR
F002G206464AR	SOLENOID SWITCH	F002G208664AR
F002G203724AR	SOLENOID SWITCH	F002G208724AR
F002G208174AR	SOLENOID SWITCH	F002G208774AR
10043365333UC	BRUSH HOLDER	F002G208864AR
F002G206164AR	BRUSH HOLDER	F002G208864AR
F002G208904AR	BRUSH HOLDER	F002G208864AR
F002G204884AR	SOLENOID SWITCH	F002G208884AR
F002G209414AR	DRIVE END SHIELD	F002G209424AR
F002G207364AR	ARMATURE	F002G209464AR
23393050434AR	SOLENOID SWITCH	F002G209684AR
10050011783UC	STATOR FRAME	F002G209924AR
10001160063UC	RETAINING WASHER	F002G213673UC
F002G213353UC	CUPPED WASHER	F002G213673UC
20035260443UC	STUD	F002G214173UC
20035260433UC	STUD	F002G214183UC
10001120383UC	FRICTION WASHER	F002G214283UC
10001120413UC	FRICTION WASHER	F002G214283UC
20046180043UC	COMPRESSION SPRING	F002G214353UC
20046010093UC	RETAINING RING	F002G214373UC
10002020083UC	STOP RING	F002G215093UC
F002G215343UC	SHIM	F002G215354AR
F000CD10214AR	STATOR FRAME	F002G700064AR
10040110854AR	ARMATURE	F002G7000854AR
10040110844AR	ARMATURE	F002G700844AR
10043365184AR	BRUSH HOLDER	F002G701974AR
F002G202634AR	ARMATURE	F002G702634AR
10062003054AR	PLANETARY GEAR TRAIN	F002G703184AR
10062001124AR	PLANETARY GEAR TRAIN	F002G703894AR
10062001704AR	PLANETARY GEAR TRAIN	F002G703894AR
F002G207764AR	SOLENOID SWITCH	F002G704244AR
90010340004AR	ARMATURE	F002G705284AR
F002G205284AR	ARMATURE	F002G705284AR
90010340014AR	ARMATURE	F002G705294AR
F002G205294AR	ARMATURE	F002G705294AR
F002G208194AR	ARMATURE	F002G708194AR
F000CD10204AR	FORK LEVER	F002G711323UC
90033319313UC	FORK LEVER	F002G719314AR
90033313123UC	BEARING PEDESTAL	F002G719344AR



F002G103144AR	SLIP-RING END SHIELD	F002G900424AR
F002G111394AR	SLIP-RING END SHIELD	F002G900424AR
F002G103894AR	SLIP-RING END SHIELD	F002G900434AR
91210358374AR	SLIP-RING END SHIELD	F002G900444AR
F002G101074AR	SLIP-RING END SHIELD	F002G900444AR
F002G101984AR	SLIP-RING END SHIELD	F002G900444AR
F002G102784AR	SLIP-RING END SHIELD	F002G900494AR
F002G103514AR	SLIP-RING END SHIELD	F002G900504AR
F002G108064AR	SLIP-RING END SHIELD	F002G900514AR
F002G107924AR	SLIP-RING END SHIELD	F002G900524AR
F002G106394AR	SLIP-RING END SHIELD	F002G900534AR
F002G107854AR	SLIP-RING END SHIELD	F002G900584AR
F002G104824AR	SLIP-RING END SHIELD	F002G900594AR
F002G109464AR	SLIP-RING END SHIELD	F002G900614AR
F002G109984AR	SLIP-RING END SHIELD	F002G900624AR
F002G106744AR	SLIP-RING END SHIELD	F002G900634AR
F002G109474AR	DRIVE END SHIELD	F002G900654AR
F002G102124AR	EL TRANSISTOR REGULATOR	F002G900824AR
F002G103464AR	EL TRANSISTOR REGULATOR	F002G900834AR
F002G104284AR	EL TRANSISTOR REGULATOR	F002G900844AR
F002G106004AR	EL TRANSISTOR REGULATOR	F002G900864AR
F002G109384AR	EL TRANSISTOR REGULATOR	F002G900884AR
F002G104774AR	EL TRANSISTOR REGULATOR	F002G900964AR
F002G105124AR	EL TRANSISTOR REGULATOR	F002G900974AR
F002G100164AR	EL TRANSISTOR REGULATOR	F002G901014AR
F002G104804AR	EL TRANSISTOR REGULATOR	F002G901034AR
F002G105664AR	EL TRANSISTOR REGULATOR	F002G901044AR
F002G106664AR	VIBRATING-TYPE REGULATOR	F002G901054AR
F002G108794AR	EL TRANSISTOR REGULATOR	F002G901064AR
F002G102494AR	EL TRANSISTOR REGULATOR	F002G901074AR
F002G901044AR	EL TRANSISTOR REGULATOR	F002G901074AR
F002G101184AR	EL TRANSISTOR REGULATOR	F002G901164AR
F002G104614AR	ROTOR	F002G901294AR
F002G104374AR	ROTOR	F002G901314AR
F002G104864AR	ROTOR	F002G901324AR
F002G104634AR	ROTOR	F002G901334AR
F002G104904AR	ROTOR	F002G901334AR
F002G104944AR	ROTOR	F002G901344AR
F002G104964AR	ROTOR	F002G901354AR
F002G104984AR	ROTOR	F002G901364AR
F002G105024AR	ROTOR	F002G901384AR



F002G105044AR	ROTOR	F002G901394AR
F002G106954AR	ROTOR	F002G901414AR
F002G107884AR	ROTOR	F002G901444AR
F002G106724AR	ROTOR	F002G901454AR
F002G108754AR	ROTOR	F002G901474AR
F002G900294AR	ROTOR	F002G901494AR
F002G109674AR	RECTIFIER	F002G901804AR
F002G107734AR	RECTIFIER	F002G901824AR
F002G104094AR	STATOR	F002G901874AR
F002G900594AR	SLIP-RING END SHIELD	F002G901924AR
F002G900604AR	SLIP-RING END SHIELD	F002G901924AR
F002G101834AR	SLIP-RING END SHIELD	F002G901944AR
F002G104004AR	SLIP-RING END SHIELD	F002G901964AR
F002G105554AR	SLIP-RING END SHIELD	F002G901974AR
F002G900094AR	SLIP-RING END SHIELD	F002G901984AR
F002G109254AR	DRIVE END SHIELD	F002G902004AR
F002G102384AR	DRIVE END SHIELD	F002G902014AR
F002G109994AR	DRIVE END SHIELD	F002G902034AR
F002G108894AR	DRIVE END SHIELD	F002G902044AR
F002G103994AR	DRIVE END SHIELD	F002G902054AR
F002G102554AR	DRIVE END SHIELD	F002G902064AR
F002G103104AR	DRIVE END SHIELD	F002G902074AR
F002G104884AR	ROTOR	F002G902084AR
F00M1201494AR	STATOR	F002G902124AR
F002G109454AR	RECTIFIER	F002G902244AR
F00M1216154AR	ROTOR	F002G902264AR
F002G109924AR	RECTIFIER	F002G902624AR
F002G902264AR	ROTOR	F002G902684AR
F002G900814AR	RECTIFIER	F002G903204AR
F002G910093UC	SHAFT SEAL	F002G91009079
F002G110953UC	HEX NUT	F002G911233UC
F00M9905003UC	SPACER RING	F002G913013UC
F002G111484AR	SLIP-RING END SHIELD	F002G913244AR
F002G114544AR	SLIP-RING END SHIELD	F002G913264AR
F002G118954AR	SLIP-RING END SHIELD	F002G913274AR
F002G118904AR	SLIP-RING END SHIELD	F002G913284AR
F002G118044AR	SLIP-RING END SHIELD	F002G913294AR
F002G116664AR	SLIP-RING END SHIELD	F002G913304AR
F002G112994AR	SLIP-RING END SHIELD	F002G913314AR
91210358464AR	SLIP-RING END SHIELD	F002G913324AR
91210358344AR	SLIP-RING END SHIELD	F002G913334AR



91210358384AR	DRIVE END SHIELD	F002G913354AR
91210358424AR	DRIVE END SHIELD	F002G913364AR
F002G117154AR	DRIVE END SHIELD	F002G913374AR
F002G119474AR	DRIVE END SHIELD	F002G913384AR
F002G116704AR	DRIVE END SHIELD	F002G913394AR
90010358194AR	DRIVE END SHIELD	F002G913414AR
91210358194AR	DRIVE END SHIELD	F002G913414AR
91210358454AR	DRIVE END SHIELD	F002G913424AR
F002G115724AR	DRIVE END SHIELD	F002G913434AR
F002G115744AR	DRIVE END SHIELD	F002G913444AR
F002G118174AR	DRIVE END SHIELD	F002G913454AR
F002G912694AR	DRIVE END SHIELD	F002G913464AR
11204230003UC	SPLASH GUARD	F002G913484AR
F002G118843UC	PULLEY	F002G914494AR
F00M1332234AR	RECTIFIER	F00M1333394AR
F00M1453004AR	EL TRANSISTOR REGULATOR	F00M1441224AR
F00M1453074AR	EL TRANSISTOR REGULATOR	F00M1441234AR
F00M1452824AR	EL TRANSISTOR REGULATOR	F00M1441424AR
F00M1453704AR	EL TRANSISTOR REGULATOR	F00M1441424AR
F00M1453494AR	EL TRANSISTOR REGULATOR	F00MA452064AR
F00M1458914AR	EL TRANSISTOR REGULATOR	F00MA453004AR
F002G913603UC	PULLEY	NON RUNNING
10001160123UC	RETAINING WASHER	NON RUNNING
10001340053UC	COVER DISC	NON RUNNING
10003010123UC	BUSHING	NON RUNNING
10003010613UC	BUSHING	NON RUNNING
10013280463UC	BEARING PEDESTAL	NON RUNNING
10019331133UC	FORK LEVER	NON RUNNING
10033000053UC	HEX NUT	NON RUNNING
10034210083UC	COUNTERSUNK-HEAD SCREW	NON RUNNING
10040110774AR	ARMATURE	NON RUNNING
10040110884AR	ARMATURE	NON RUNNING
10043364233UC	BRUSH HOLDER	NON RUNNING
10043365194AR	BRUSH HOLDER	NON RUNNING
10043367034AR	BRUSH HOLDER	NON RUNNING
10043368203UC	BRUSH HOLDER	NON RUNNING
10043368364AR	BRUSH HOLDER	NON RUNNING
10050012023UC	STATOR FRAME	NON RUNNING
10050013544AR	STATOR FRAME	NON RUNNING
10058510544AR	COMMUTATOR END SHIELD	NON RUNNING
10058510703UC	COMMUTATOR END SHIELD	NON RUNNING





10062000643UC	PLANETARY GEAR TRAIN	NON RUNNING
10062001174AR	PLANETARY GEAR TRAIN	NON RUNNING
10062001374AR	PLANETARY GEAR TRAIN	NON RUNNING
10062003164AR	PLANETARY GEAR TRAIN	NON RUNNING
10062096024AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
11201000203UC	PLAIN WASHER	NON RUNNING
11201000293UC	WASHER	NON RUNNING
11201120053UC	INSULATING WASHER	NON RUNNING
11201120113UC	INSULATING WASHER	NON RUNNING
11201120163UC	INSULATING WASHER	NON RUNNING
11205910073UC	INSULATING PART	NON RUNNING
11209000123UC	DEEP-GROOVE BALL BEARING	NON RUNNING
11209050313UC	DEEP-GROOVE BALL BEARING	NON RUNNING
1120905074079	DEEP-GROOVE BALL BEARING	NON RUNNING
1120905105079	DEEP-GROOVE BALL BEARING	NON RUNNING
11209051053UC	DEEP-GROOVE BALL BEARING	NON RUNNING
11210380153UC	COVER PLATE	NON RUNNING
11233420043UC	ROUND NUT	NON RUNNING
11234292363UC	OVAL-HEAD SCREW	NON RUNNING
11234530103UC	HEX SCREW	NON RUNNING
11240352233UC	ROTOR	NON RUNNING
11250451673UC	STATOR	NON RUNNING
11258242924AR	DRIVE END SHIELD	NON RUNNING
11266100604AR	FAN	NON RUNNING
13302060033UC	SEAL RING	NON RUNNING
20001011123UC	SHIM	NON RUNNING
20001011133UC	SHIM	NON RUNNING
20001011143UC	SHIM	NON RUNNING
20002200993UC	FASTENING FLANGE	NON RUNNING
2000301006079	SINTERED-METAL BUSHING	NON RUNNING
20003010063UC	SINTERED-METAL BUSHING	NON RUNNING
20003010194AR	SINTERED-METAL BUSHING	NON RUNNING
20003010434AR	SINTERED-METAL BUSHING	NON RUNNING
20005560903UC	CAPSULE	NON RUNNING
20058541494AR	COMMUTATOR END SHIELD	NON RUNNING
20062094954AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
29100221383UC	SOCKET HEAD CAP SCREW	NON RUNNING
29107802853UC	COUNTERSUNK WOOD SCREW	NON RUNNING
2915011009079	HEX NUT	NON RUNNING



2915052006079	HEX NUT	NON RUNNING
2915062003079	HEX NUT	NON RUNNING
2916710509079	FLAT SEAL RING	NON RUNNING
2918740005079	SPRING LOCK WASHER	NON RUNNING
90010341023UC	EXCITATION WINDING	NON RUNNING
90010341033UC	EXCITATION WINDING	NON RUNNING
90010358034AR	COMMUTATOR END SHIELD	NON RUNNING
90010358224AR	DRIVE END SHIELD	NON RUNNING
90010358394AR	DRIVE END SHIELD	NON RUNNING
90010358734AR	COMMUTATOR END SHIELD	NON RUNNING
90010358754AR	DRIVE END SHIELD	NON RUNNING
90010358844AR	DRIVE END SHIELD	NON RUNNING
90010358864AR	DRIVE END SHIELD	NON RUNNING
90010358904AR	COMMUTATOR END SHIELD	NON RUNNING
90011403523UC	SHIM	NON RUNNING
91210305023UC	PROTECTIVE CAP	NON RUNNING
91210308023UC	SUPPRESSION CAPACITOR	NON RUNNING
91210309013UC	BALL BEARING	NON RUNNING
91210333003UC	INLET UNION	NON RUNNING
91210334023UC	SOCKET HEAD CAP SCREW	NON RUNNING
91210340014AR	ROTOR	NON RUNNING
91210358164AR	DRIVE END SHIELD	NON RUNNING
91210358294AR	SLIP-RING END SHIELD	NON RUNNING
91210358414AR	SLIP-RING END SHIELD	NON RUNNING
91210366273UC	PULLEY	NON RUNNING
91210366333UC	PULLEY	NON RUNNING
91210372004AR	VACUUM PUMP	NON RUNNING
94911402033UC	O-RING	NON RUNNING
94911435013UC	STUD	NON RUNNING
94913302073UC	SHAFT SEAL	NON RUNNING
94913374083UC	CONSTANT-PRESSURE VALVE	NON RUNNING
F000BL10714AR	STATOR	NON RUNNING
F000BL19384AR	RECTIFIER	NON RUNNING
F000CD10624AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F000CD11104AR	DRIVE END SHIELD	NON RUNNING
F002G101094AR	VACUUM PUMP	NON RUNNING
F002G101364AR	DRIVE END SHIELD	NON RUNNING
F002G101484AR	VACUUM PUMP	NON RUNNING
F002G101493UC	CONNECTOR	NON RUNNING
F002G101804AR	DRIVE END SHIELD	NON RUNNING



F002G101843UC	CONNECTOR	NON RUNNING
F002G101983UC	SLIP-RING END SHIELD	NON RUNNING
F002G102204AR	EL TRANSISTOR REGULATOR	NON RUNNING
F002G102474AR	DRIVE END SHIELD	NON RUNNING
F002G102484AR	SLIP-RING END SHIELD	NON RUNNING
F002G102584AR	SLIP-RING END SHIELD	NON RUNNING
F002G102794AR	STATOR	NON RUNNING
F002G102803UC	CONNECTOR	NON RUNNING
F002G103004AR	ROTOR	NON RUNNING
F002G103503UC	PROTECTIVE CAP	NON RUNNING
F002G103543UC	CONNECTOR	NON RUNNING
F002G104254AR	SLIP-RING END SHIELD	NON RUNNING
F002G105004AR	ROTOR	NON RUNNING
F002G105224AR	RECTIFIER	NON RUNNING
F002G105413UC	PROTECTIVE CAP	NON RUNNING
F002G105713UC	CONNECTOR UNIT	NON RUNNING
F002G105723UC	EXCITATION WINDING	NON RUNNING
F002G106714AR	ROTOR	NON RUNNING
F002G106903UC	CONNECTOR	NON RUNNING
F002G108323UC	PROTECTIVE CAP	NON RUNNING
F002G108784AR	SLIP-RING END SHIELD	NON RUNNING
F002G108814AR	STATOR	NON RUNNING
F002G109004AR	STATOR	NON RUNNING
F002G109034AR	STATOR	NON RUNNING
F002G109154AR	ROTOR	NON RUNNING
F002G109224AR	SLIP-RING END SHIELD	NON RUNNING
F002G109634AR	DRIVE END SHIELD	NON RUNNING
F002G109854AR	RECTIFIER	NON RUNNING
F002G111074AR	SLIP-RING END SHIELD	NON RUNNING
F002G111623UC	HOLLOW BOLT	NON RUNNING
F002G113133UC	PULLEY	NON RUNNING
F002G113314AR	EXCITATION WINDING	NON RUNNING
F002G113694AR	SLIP-RING END SHIELD	NON RUNNING
F002G113964AR	SLIP-RING END SHIELD	NON RUNNING
F002G114124AR	COVER	NON RUNNING
F002G11450079	SLIP-RING END SHIELD	NON RUNNING
F002G114713UC	PULLEY	NON RUNNING
F002G115034AR	PULLEY	NON RUNNING
F002G115114AR	PULLEY	NON RUNNING
F002G115154AR	PULLEY	NON RUNNING
F002G115213UC	PROTECTIVE CAP	NON RUNNING



F002G115314AR	ROTOR	NON RUNNING
F002G115564AR	DRIVE END SHIELD	NON RUNNING
F002G115584AR	SLIP-RING END SHIELD	NON RUNNING
F002G115603UC	BUSHING	NON RUNNING
F002G117334AR	DRIVE END SHIELD	NON RUNNING
F002G118004AR	PULLEY	NON RUNNING
F002G119584AR	PULLEY	NON RUNNING
F002G200094AR	ARMATURE	NON RUNNING
F002G200104AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F002G200134AR	COMMUTATOR END SHIELD	NON RUNNING
F002G200254AR	DRIVE END SHIELD	NON RUNNING
F002G200344AR	ARMATURE	NON RUNNING
F002G200444AR	SOLENOID SWITCH	NON RUNNING
F002G200504AR	DRIVE END SHIELD	NON RUNNING
F002G200694AR	DRIVE END SHIELD	NON RUNNING
F002G200704AR	DRIVE END SHIELD	NON RUNNING
F002G200984AR	EXCITATION WINDING	NON RUNNING
F002G201024AR	DRIVE END SHIELD	NON RUNNING
F002G201074AR	COMMUTATOR END SHIELD	NON RUNNING
F002G201104AR	SOLENOID SWITCH	NON RUNNING
F002G201164AR	COMMUTATOR END SHIELD	NON RUNNING
F002G201434AR	DRIVE END SHIELD	NON RUNNING
F002G201464AR	COMMUTATOR END SHIELD	NON RUNNING
F002G201564AR	ARMATURE	NON RUNNING
F002G201724AR	EXCITATION WINDING	NON RUNNING
F002G201783UC	CARBON BRUSH	NON RUNNING
F002G201914AR	ARMATURE	NON RUNNING
F002G201954AR	DRIVE END SHIELD	NON RUNNING
F002G201964AR	SOLENOID SWITCH	NON RUNNING
F002G202254AR	SOLENOID SWITCH	NON RUNNING
F002G202314AR	DRIVE END SHIELD	NON RUNNING
F002G202374AR	STARTING-MOTOR PINION	NON RUNNING
F002G202414AR	YOKE	NON RUNNING
F002G202534AR	STATOR FRAME	NON RUNNING
F002G202824AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F002G202934AR	DRIVE END SHIELD	NON RUNNING
F002G202994AR	DRIVE END SHIELD	NON RUNNING
F002G203044AR	DRIVE END SHIELD	NON RUNNING
F002G203364AR	DRIVE END SHIELD	NON RUNNING
F002G203394AR	DRIVE END SHIELD	NON RUNNING



F002G203404AR	DRIVE END SHIELD	NON RUNNING
F002G203474AR	ALTERNATOR	NON RUNNING
F002G203533UC	ARMATURE	NON RUNNING
F002G203563UC	EXCITATION WINDING	NON RUNNING
F002G203624AR	DRIVE END SHIELD	NON RUNNING
F002G203694AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F002G203793UC	EXCITATION WINDING	NON RUNNING
F002G203813UC	CARBON BRUSH	NON RUNNING
F002G203823UC	BRUSH HOLDER	NON RUNNING
F002G203844AR	DRIVE END SHIELD	NON RUNNING
F002G203984AR	STATOR FRAME	NON RUNNING
F002G204134AR	ARMATURE	NON RUNNING
F002G204174AR	BRUSH HOLDER	NON RUNNING
F002G204194AR	COMMUTATOR END SHIELD	NON RUNNING
F002G204214AR	COMMUTATOR END SHIELD	NON RUNNING
F002G204224AR	COMMUTATOR END SHIELD	NON RUNNING
F002G204234AR	COMMUTATOR END SHIELD	NON RUNNING
F002G204254AR	DRIVE END SHIELD	NON RUNNING
F002G204264AR	COMMUTATOR END SHIELD	NON RUNNING
F002G204314AR	SOLENOID SWITCH	NON RUNNING
F002G204874AR	DRIVE END SHIELD	NON RUNNING
F002G204984AR	DRIVE END SHIELD	NON RUNNING
F002G204994AR	COMMUTATOR END SHIELD	NON RUNNING
F002G205494AR	STATOR FRAME	NON RUNNING
F002G205724AR	SOLENOID SWITCH	NON RUNNING
F002G205834AR	DRIVE END SHIELD	NON RUNNING
F002G205864AR	DRIVE END SHIELD	NON RUNNING
F002G205914AR	DRIVE END SHIELD	NON RUNNING
F002G205954AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F002G206054AR	PLANETARY GEAR TRAIN	NON RUNNING
F002G206144AR	DRIVE END SHIELD	NON RUNNING
F002G206564AR	DRIVE END SHIELD	NON RUNNING
F002G206934AR	STATOR FRAME	NON RUNNING
F002G207004AR	SOLENOID SWITCH	NON RUNNING
F002G207424AR	DRIVE END SHIELD	NON RUNNING
F002G207454AR	ARMATURE	NON RUNNING
F002G207634AR	COMMUTATOR END SHIELD	NON RUNNING
F002G207714AR	ARMATURE	NON RUNNING
F002G208314AR	SOLENOID SWITCH	NON RUNNING
F002G208324AR	SOLENOID SWITCH	NON RUNNING



F002G208444AR	OVERRUNNING-CLUTCH DRIVE	NON RUNNING
F002G208494AR	SOLENOID SWITCH	NON RUNNING
F002G208544AR	SOLENOID SWITCH	NON RUNNING
F002G208554AR	SOLENOID SWITCH	NON RUNNING
F002G208634AR	DRIVE END SHIELD	NON RUNNING
F002G209944AR	DRIVE END SHIELD	NON RUNNING
F002G210104AR	SOLENOID SWITCH	NON RUNNING
F002G211224AR	BUSHING	NON RUNNING
F002G211264AR	DRIVE END SHIELD	NON RUNNING
F002G211283UC	O-RING	NON RUNNING
F002G211643UC	POLE SHOE	NON RUNNING
F002G211923UC	SCREW AND WASHER ASSEMBLY	NON RUNNING
F002G211993UC	COMPRESSION SPRING	NON RUNNING
F002G212283UC	STOP RING	NON RUNNING
F002G212584AR	DRIVE END SHIELD	NON RUNNING
F002G212803UC	BRUSH GUIDE	NON RUNNING
F002G212963UC	COUNTERSUNK-HEAD SCREW	NON RUNNING
F002G214543UC	GUIDE BUSHING	NON RUNNING
F002G214753UC	CUPPED WASHER	NON RUNNING
F002G214763UC	V-BELT	NON RUNNING
F002G215283UC	SEAL	NON RUNNING
F002G215363UC	POLE SHOE	NON RUNNING
F002G215473UC	COUNTERSUNK-HEAD SCREW	NON RUNNING
F002G219113UC	O-RING	NON RUNNING
F002G219483UC	BRUSH GUIDE	NON RUNNING
F002G701894AR	BRUSH HOLDER	NON RUNNING
F002G900244AR	EL TRANSISTOR REGULATOR	NON RUNNING
F002G901494AR	ROTOR	NON RUNNING
F002G902594AR	SLIP-RING END SHIELD	NON RUNNING
F00M1201073UC	STATOR	NON RUNNING
F00M1216113UC	ROTOR	NON RUNNING
F00M1332904AR	RECTIFIER	NON RUNNING
F00M9901043UC	HEX NUT	NON RUNNING
F00M9901523UC	HEX SCREW	NON RUNNING
F00M9901693UC	SCREW AND WASHER ASSEMBLY	NON RUNNING
F00M1201274AR		NON RUNNING
00011070244AR	STARTER	NON RUNNING
00011090184AR	STARTER	NON RUNNING
90000330084AR	STARTER	NON RUNNING



90000330094AR	STARTER	NON RUNNING
90000330134AR	STARTER	NON RUNNING
F000CD02014AR	STARTER	NON RUNNING
F002G201014AR	STARTER	NON RUNNING
F002G201184AR	STARTER	NON RUNNING
F002G201904AR	STARTER	NON RUNNING
F002G202134AR	STARTER	NON RUNNING
F002G203104AR	STARTER	NON RUNNING
F002G203114AR	STARTER	NON RUNNING
F002G203184AR	STARTER	NON RUNNING
F002G203264AR	STARTER	NON RUNNING
F002G203524AR	STARTER	NON RUNNING
F002G203634AR	STARTER	NON RUNNING
F002G204494AR	STARTER	NON RUNNING
F002G204754AR	STARTER	NON RUNNING
F002G205014AR	STARTER	NON RUNNING
F002G205434AR	STARTER	NON RUNNING
F002G205444AR	STARTER	NON RUNNING
F002G205534AR	STARTER	NON RUNNING
F002G205704AR	STARTER	NON RUNNING
F002G205824AR	STARTER	NON RUNNING
F002G205924AR	STARTER	NON RUNNING
F002G205934AR	STARTER	NON RUNNING
F002G205944AR	STARTER	NON RUNNING
F002G206394AR	STARTER	NON RUNNING
F002G206694AR	STARTER	NON RUNNING
F002G206704AR	STARTER	NON RUNNING
F002G206724AR	STARTER	NON RUNNING
F002G207144AR	STARTER	NON RUNNING
F002G207154AR	STARTER	NON RUNNING
F002G207414AR	STARTER	NON RUNNING
F002G207574AR	STARTER	NON RUNNING
F002G208524AR	STARTER	NON RUNNING
F002G209324AR	STARTER	NON RUNNING
01241100034AR	ALTERNATOR	NON RUNNING
01241100044AR	ALTERNATOR	NON RUNNING
01241100064AR	ALTERNATOR	NON RUNNING
01242200094AR	ALTERNATOR	NON RUNNING
01242200114AR	ALTERNATOR	NON RUNNING
01242200134AR	ALTERNATOR	NON RUNNING
01243150284AR	ALTERNATOR	NON RUNNING



01243252024AR	ALTERNATOR	NON RUNNING
01243252204AR	ALTERNATOR	NON RUNNING
0124555534AR	ALTERNATOR	NON RUNNING
91200301134AR	ALTERNATOR	NON RUNNING
91200301154AR	ALTERNATOR	NON RUNNING
91200301194AR	ALTERNATOR	NON RUNNING
F000BL01104AR	ALTERNATOR	NON RUNNING
F002G100024AR	ALTERNATOR	NON RUNNING
F002G100054AR	ALTERNATOR	NON RUNNING
F002G100314AR	ALTERNATOR	NON RUNNING
F002G101154AR	ALTERNATOR	NON RUNNING
F002G101554AR	ALTERNATOR	NON RUNNING
F002G101564AR	ALTERNATOR	NON RUNNING
F002G101664AR	ALTERNATOR	NON RUNNING
F002G102354AR	ALTERNATOR	NON RUNNING
F002G102434AR	ALTERNATOR	NON RUNNING
F002G103294AR	ALTERNATOR	NON RUNNING
F002G103974AR	ALTERNATOR	NON RUNNING
F002G104184AR	ALTERNATOR	NON RUNNING
F002G104214AR	ALTERNATOR	NON RUNNING
F002G104234AR	ALTERNATOR	NON RUNNING
F002G104704AR	ALTERNATOR	NON RUNNING
F002G105254AR	ALTERNATOR	NON RUNNING
F002G105994AR	ALTERNATOR	NON RUNNING
F002G106214AR	ALTERNATOR	NON RUNNING
F002G106354AR	ALTERNATOR	NON RUNNING
F002G106474AR	ALTERNATOR	NON RUNNING
F002G106494AR	ALTERNATOR	NON RUNNING
F002G106694AR	ALTERNATOR	NON RUNNING
F002G106944AR	ALTERNATOR	NON RUNNING
F002G107934AR	ALTERNATOR	NON RUNNING
F002G109144AR	ALTERNATOR	NON RUNNING
F002G900084AR	ALTERNATOR	NON RUNNING
F002G900704AR	ALTERNATOR	NON RUNNING
F002G205164AR	STARTER	NON RUNNING
11234210023UC	COUNTERSUNK-HEAD SCREW	Obsolete
F002G114504AR	SLIP-RING END SHIELD	Obsolete
01242200084AR	ALTERNATOR	Obsolete
F002G111414AR	VACUUM PUMP	Obsolete

Yours sincerely

Bosch Limited